


Bei Lichtspaltmessung müssen Punkt A und B anliegen

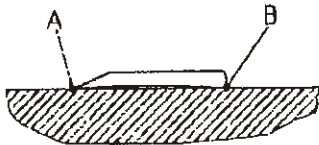

Artikel Nr.	0	1	7	1	9	0	0	2	3	9	5	0
Kreso Nr.	0	0	2	3	9	5	0					

Schnitt A-B M 1:1

Freiemaßtoleranzen		Nennmaße		Toleranzen		Maßstab	
h	H	h	H	h	H	h	H
0	0	0	0	0	0	0	0
0.01	0.01	0.01	0.01	0.01	0.01	0.01	0.01
0.02	0.02	0.02	0.02	0.02	0.02	0.02	0.02
0.05	0.05	0.05	0.05	0.05	0.05	0.05	0.05
0.1	0.1	0.1	0.1	0.1	0.1	0.1	0.1
0.2	0.2	0.2	0.2	0.2	0.2	0.2	0.2
0.5	0.5	0.5	0.5	0.5	0.5	0.5	0.5
1	1	1	1	1	1	1	1
2	2	2	2	2	2	2	2
5	5	5	5	5	5	5	5
10	10	10	10	10	10	10	10
20	20	20	20	20	20	20	20
50	50	50	50	50	50	50	50
100	100	100	100	100	100	100	100
200	200	200	200	200	200	200	200
500	500	500	500	500	500	500	500
1000	1000	1000	1000	1000	1000	1000	1000
2000	2000	2000	2000	2000	2000	2000	2000
5000	5000	5000	5000	5000	5000	5000	5000
10000	10000	10000	10000	10000	10000	10000	10000

Bearb.	Datum	Name
Gepr.		Seiler
Norm		

Maßstab	
Polar 78 new	